

(封底)

(封面)

METZ  
Lead the future

 
METZ  
Lead the future

Quick Start Guide

LED TV

MPE7\* Series

ENG

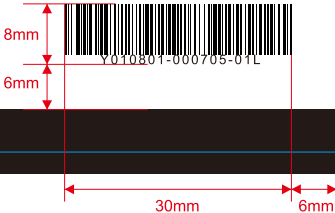

外观质量要求:  
1. 图文清晰、无残缺、无乱码、颜色准确, 内容与文档一致。  
2. 尺寸正确, 符合公差要求; 表面清洁无刮花、无破损; 不掉色、无透印, 边缘切割整齐等。

Appearance and quality Requirements:  
1.Contents should be clearly printed without defects or garbled characters. Contents and colors should be consistent with the drawing.  
2.Size should be correct and conform to the tolerance requirements.  
The edges should be cut neatly, and the surface should be clean without scratches, damages, fading or printing through.

技术要求:  
1. 材质:封面封底120g铜版纸; 内页80G书写纸; 黑白色印刷, 表面覆哑膜。  
2. 尺寸:A5(148X210mm), 尺寸公差(0/-3)。  
3. 装订: 页数≤80P时, 骑马钉装订, 页数>80P时胶装。  
4. 环保: 符合RoHS、Reach和TSCA最新标准。

Technical requirements:  
1.Material: front and back cover 120g coated paper; inner page 80G writing paper; black and white printing.  
2.Size: A5 (148 X 210 mm) with a tolerance of (0/-3) mm.  
3.If there are more than 80 pages, user manual is bound with glue. If not more than 80 pages, it is bound with staples.  
4.Meet the latest standards of RoHS, Reach and TSCA.


深圳创维-RGB电子有限公司  
SHENZHEN CHUANGWEI-RGB ELECTRONICS CO., LTD.

|                   |             |                    |                    |
|-------------------|-------------|--------------------|--------------------|
| 物料名称 (TITLE)      | 快速操作指南      | 品牌名称 (BRAND NAME)  | METZ               |
| 产品型号 (MODEL)      | 24P2E-AK07G | 销售型号 (SALES MODEL) | MPE7*              |
| 视 角 (PROJECTION)  |             | 物料编号 (PART NO.)    | Y010801-000705-01L |
| 单 位 (UNITS)       | mm          | 绘制/日期 (DWN./DATE)  | 刘剑凤 2024-10        |
| 比 例 (SCALE)       | 1:1         | 校核/日期 (CHK./DATE)  |                    |
| 版本号 (VERSION NO.) | 1.0         | 批准/日期 (APP./DATE)  |                    |


# PREPARATION

 *Note: The pictures are only for reference.*


## Unpacking

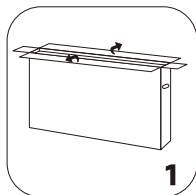

Open the package.

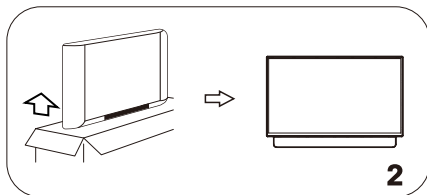 

 
Take out the device and put it on a flat surface.

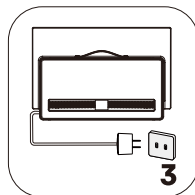


Connect the power cord.

*\* This is a Portable TV with built-in lithium-ion battery, you can choose to connect the power cord or use the device's battery. To keep the battery in optimal condition, drain it completely when using it for the first time, then fully charge it*


## Accessories

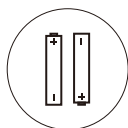 


Batteries/2

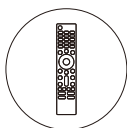 


Remote Control

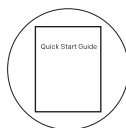 

Quick Start Guide

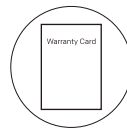 

Warranty Card

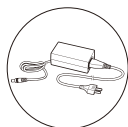 

Adapter

**Note:**


1. The information in this document is subject to change without notice. The manufacturer accepts no liability for damage resulting directly or indirectly from faults, incompleteness or discrepancies between the user manual and the product described.


2. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the device as you will.


# WARNING AND PRECAUTION

Read all of the instructions before operating the set. Keep these instructions well for later use.

## Important Safety Instructions

- Read these instructions – All the safety and operating instructions should be read before this product is operated.
- Keep these instructions – The safety and operating instructions should be retained for future reference.
- Heed all warnings – All warnings on the appliance and in the operating instructions should be adhered to.
- Follow all instructions – All operating and use instructions should be followed.
- Do not use this apparatus near water – The appliance should not be used near water or moisture – for example, in a wet basement or near a swimming pool, and the like.
- Clean only with dry cloth.
- Do not block any ventilation openings. Install in accordance with the manufacturer's instructions.
- Do not install near any heat sources such as direct sunlight, radiators, heat registers, stoves, or other apparatus (including amplifiers) that produce heat.
- Do not defeat the safety purpose of the polarized or grounding plug. A polarized plug has two blades with one wider than the other. A grounding plug has two blades and a third grounding prong. The wide blade or the third prong is provided for your safety. If the provided plug does not fit into your outlet, consult an electrician for replacement of the obsolete outlet.
- Protect the power cord from being walked on or pinched particularly at the plugs, convenience receptacles, and at the point where they exit from the apparatus.
- Only use attachments/accessories specified by the manufacturer.
-  Use only with the cart, stand, tripod, bracket, or table specified by the manufacturer, or sold with the apparatus. When a cart or rack is used, use caution when moving the cart/apparatus combination to avoid injury from tip-over.
- Unplug the apparatus during lightning storms or when unused for long periods of time.
- Refer all servicing to qualified personnel. Servicing is required when the apparatus has been damaged in any way, such as power supply cord or plug is damaged, liquid has been spilled or objects have fallen into the apparatus, the apparatus has been exposed to rain or moisture, does not operate normally, or has been dropped.
- CAUTION: These servicing instructions are for use by qualified service personnel only. To reduce the risk of electric shock, do not perform any servicing other than that contained in the operating instructions unless you are qualified to do so.
- Do not install this equipment in a confined or building-in space such as a book case or similar unit, and remain a well ventilation conditions at open site. The ventilation should not be impeded by covering the ventilation openings with items such as newspaper, table-cloths, curtains etc.
- Please refer the information on rear enclosure for electrical and safety information before installing or operating the apparatus.
- To reduce the risk of fire or electric shock, do not expose this apparatus to rain or moisture.
- The apparatus shall not be exposed to dripping or splashing and that no objects filled with liquids, such as vases, shall be placed on the apparatus. Do not use the set near dust place.







- For the terminals marked with symbol of “⚡” may be of sufficient magnitude to constitute a risk of electric shock. The external wiring connected to the terminals requires installation by an instructed person or the use of ready-made leads or cords.
- Danger of explosion if battery is incorrectly replaced. Replace only with the same or equivalent type.
- The battery (battery or batteries or battery pack) shall not be exposed to excessive heat such as sunshine, fire or the like.
- Listening to music at high volume levels and for extended durations can damage one's hearing. In order to reduce the risk of damage to hearing, one should lower the volume to a safe, comfortable level, and reduce the amount of time listening at high levels.
- The appliance coupler is used as disconnect device, the disconnect device shall remain readily operable.
- When not in use and during movement, please take care of the power cord set, e.g. tie up the power cord set with cable tie or something like that. It shall be free from sharp edges and the like that can cause abrasion of the power cord set. When put into use again, please make sure the power cord set being not damaged, If any damages found, please look for the service person to replace the power cord set specified by the manufacturer or have the same characteristics as the original one.
- Attention should be drawn to environmental aspects of battery disposal.
- No naked flame sources, such as lighted candles, should be placed on the apparatus. To prevent the spread of fire, keep candles or other open flames away from the apparatus at all times.
- If the apparatus have the symbol  in its rating label and the power cord has two pins, it means that the equipment is a Class II or double insulated electrical appliance. It has been designed in such a way that it does not require a safety connection to electrical earth.(Only for Class II appliance)
- Warning for Apparatus containing COIN / BUTTON CELL BATTERIES (Below instruction only used for the apparatus containing a user-replaceable coin/button cell battery)  
WARNING:  
Do not ingest the battery, Chemical Burn Hazard (The remote control supplied with) this product contains a coin/button cell battery. If the coin/button cell battery is swallowed, it can cause severe internal burns in just 2 hours and can lead to death. Keep new and used batteries away from children. If the battery compartment does not close securely, stop using the product and keep it away from children. If you think batteries might have been swallowed or placed inside any part of the body, seek immediate medical attention.

-  This lightning flash with arrowhead symbol within an equilateral triangle is intended to alert the user to the presence of non-insulated “dangerous voltage” within the product's enclosure that may be of sufficient magnitude to constitute a risk of electric shock.

To reduce the risk of electric shock. Do not remove cover (or back). No user serviceable parts inside. Refer to qualified service personnel.

The exclamation point within an equilateral triangle is intended to alert the user to the presence of important operating and maintenance instructions in the literature accompanying the appliance.

- The following information are recommended to be included as far as applicable where applicable:

|   |  |
|---|--|
|  Refer to alternating current(AC). |  Refer to stand-by or power on. |
|  Refer to direct current(DC).      |  Refer to power on.             |
|  Refer to ClassII equipment.       |  Refer to dangerous voltage.    |

## WEEE Directive



Correct Disposal of this product. This marking indicates that this product should not be disposed with other household wastes throughout the EU. To prevent possible harm to the environment or human health from uncontrolled waste disposal, recycle it responsibly to promote the sustainable reuse of material resources. To return your used device, please use the return and collection systems or contact the retailer where the product was purchased. They can take this product for environmental safe recycling.

## Warning

- **Warning: Stability Hazard**

A television set may fall, causing serious personal injury or death. Many injuries, particularly to children, can be avoided by taking simple precautions such as:

- ALWAYS use cabinets or stands or mounting methods recommended by the manufacturer of the television set.
- ALWAYS use furniture that can safely support the television set.
- ALWAYS ensure the television set is not overhanging the edge of the supporting furniture.
- ALWAYS educate children about the dangers of climbing on furniture to reach the television set or its controls.
- ALWAYS route cords and cables connected to your television so they cannot be tripped over, pulled or grabbed.
- NEVER place a television set in an unstable location.
- NEVER place the television set on tall furniture (for example, cupboards or bookcases) without anchoring both the furniture and the television set to a suitable support.
- NEVER place the television set on cloth or other materials that may be located between the television set and supporting furniture.
- NEVER place items that might tempt children to climb, such as toys and remote controls, on the top of the television or furniture on which the television is placed.

If the existing television set is being retained and relocated, the same considerations as above should be applied.

## Precautions For Using Remote Control

- Use the remote control by pointing it towards the remote sensor. The items between the remote control and the remote sensor will interfere the normal operation.
- Do not make remote control vibrate violently. Also, do not splash liquid on the remote control, also do not put the remote control in high humidity place.
- Do not place remote control under direct sunlight which will cause deformation of the unit by heat.
- When the remote sensor is under direct sunlight or strong lighting, the remote control will not work. If so please change the lighting or TV's position, or operate the remote control closer to the remote sensor.
- Before Bluetooth searching, please make sure you have turned external Bluetooth devices in the pairing mode. For the Bluetooth remote control supplied with the TV (may not be available), you can press **BACK** and **HOME** buttons together to open its pairing mode. For other Bluetooth devices, please read their own instruction manuals for opening the pairing mode.

 
## Precautions For Using Battery

Improper using of the battery will cause leakage. So please do as the following methods and use carefully.

1. Please note the batteries' polarity, to avoid short circuit.
2. When the battery's voltage is insufficient which affect the use range, you should replace new battery. Remove the batteries from the remote control unit if you do not intend to use it for a long time.
3. Do not use different types of batteries (for example, Manganese and Alkaline batteries) together.
4. Do not put the battery into fire, and charge or decompose the battery.
5. Please dispose of batteries in compliance with relevant environmental protection regulations.
6. **WARNING:** The batteries (battery pack or batteries installed) shall not be exposed to excessive heat such as sunshine, fire or the like.

## Install Remote Control Batteries

Place two AAA size batteries in the remote control's battery compartment, making sure to match the polarity markings inside the compartment.



*Note: The picture is only for reference.*

# TERMINAL CONNECTION

Note:

- 1). The pictures are only for reference.
- 2). Terminal quantities and names may vary depending on the region or model.
- 3). External equipments and cables shown herein are not supplied with the TV.

 
## • USB

Connect a USB storage device.



## • HDMI

Receive a digital input signal from HDMI devices such as DVD, BluRay Player, Media Player, or Set Top Box.



## • DIGITAL AUDIO OUT

Use an optical cable to output your TV's audio signal to a compatible digital audio receiver.



 
## • LAN

Wired network port.



## • AV IN

Receive audio and video signals from AV devices such as DVD.



## • DC IN

 
Power input.



Note: jack connection size: 5.5x2.5mm


## • ANTENNA IN

Connect a coaxial cable to receive signals from the antenna or cable.

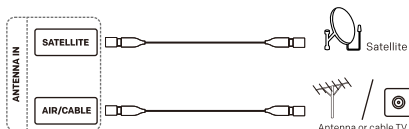

## • CI

 CI card port.




# REMOTE CONTROL

Note:

1). The picture is only for reference.

 2). The image, buttons and functions of remote control may vary depending on the region or model.

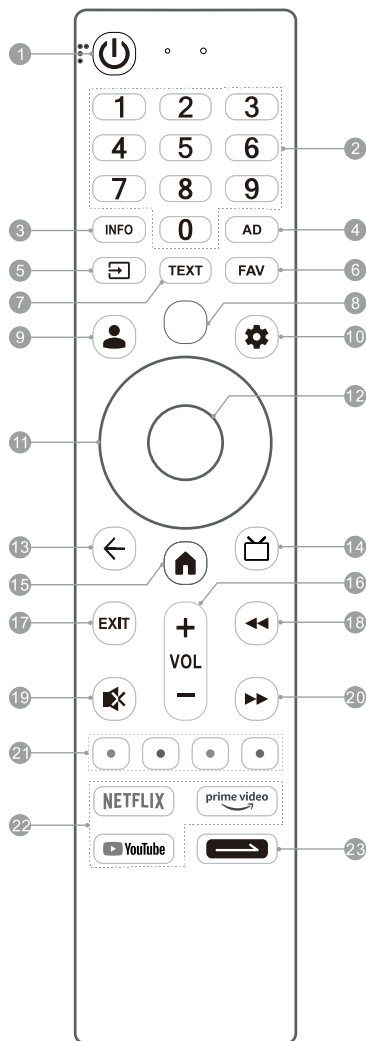

## 1. POWER ( ): Turn on or turn off the TV.

- In working status:

- Short press POWER button to turn the TV to fastboot mode.

- Long press POWER button to turn the TV to standby mode.

- In fastboot mode, which is less energy saving, press POWER button to turn on the TV in a short time.

- In standby mode, which is more energy saving, press POWER button to turn on the TV in a standard time.

## 2. Number Buttons (0~9):

Select the channel directly, or input a number.

## 3. INFO: Access the INFO interface.

## 4. AD: Adjust audio settings including audio language, sound track, audio type and so on in DTV mode.

## 5. SOURCE ( ): Access the source menu.

## 6. FAV: Access the list of favorite channels.

## 7. TEXT: Access or exit the teletext menu.

## 8. MIC ( ): Start using the near field voice function.

- Short press MIC button to wake up the voice assistant.

- Long press MIC button to start receiving your voice command. After your speaking, release MIC button to run voice function.

## 9. ACCOUNT ( ): Sign in with your Google account to get the entertainment you love.

## 10. Dashboard ( ): Access the dashboard of your Google TV.

## 11. UP/DOWN/LEFT/RIGHT

Navigate the menu to select the content you need, or

- Press UP/DOWN button to change channels.

## 12. OK: Confirm, enter or execute the selected item, or access the channel list.

## 13. BACK ( ): Return to upper-level content, or exit the current screen.

## 14. GUIDE ( ): Access the Electronic Program Guide in DTV mode.

## 15. HOME ( ): Access the home screen.

## 16. Volume Up/Down (VOL +/-): Adjust the sound volume.

## 17. EXIT: Exit the current operation.

## 18. Fast Backward ( ): Fast backward the playback in media player.

## 19. MUTE ( ): Mute or restore the TV sound.

## 20. Fast Forward ( ): Fast forward the playback in media player.

## 21. Color Buttons (RED/GREEN/YELLOW/BLUE):

Execute the prompt function in specific mode.

## 22. Application Buttons: Access specific applications quickly and directly.

## 23. Daily Key ( ):

- Short press to start the shortcut function, or setup it for the first time.

 
- Long press to setup the shortcut function.

# BASIC OPERATION

## E-Manual

E-Manual is built into your TV and can be displayed on the screen. To learn more about your TV features, access the E-Manual by referring to the following operation. E-Manual may not be available depending on the region or model.



1. Press **HOME** button to access the home screen.
2. Press **▲/▼/◀/▶** and **OK** button to select and enter "E-Manual" in the list of your applications.

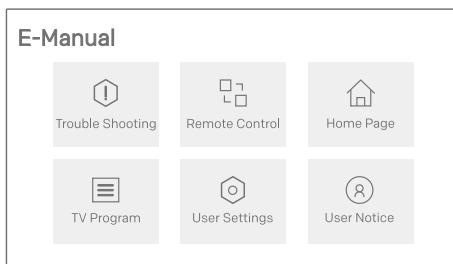

*Note: The picture is only for reference.*

## TV Control Button

  *Note: The picture is only for reference.*

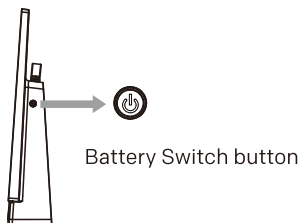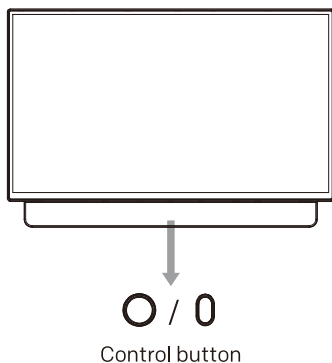

## ■ Turn on the TV

- Connect the power cable enter the standby state, and then press the Control button or power button of the remote control to turn on the TV.
- Press the Battery Switch button enter the standby state, and then press the Control button or power button of the remote control to turn on the TV.


### *Reminder:*

1. After connecting the power cord, the device enters standby and charging state. At this time, the battery switch button is inactive until the power cord is disconnected.
2. To avoid unnecessary hazards and damage to the human body and the surrounding environment caused by the lithium battery, disconnect the power cable when the device is not in use for a long time.
3. Long press the Battery Switch button to turn off the TV. In battery-powered standby mode, battery power will be automatically turned off if there is no operation for 2 minutes.



# RADIO MODULE

Note: Hereby, [Metz Consumer Electronics GmbH] declares that the radio equipment type [MPE7\* Series] is in compliance with Directive 2014/53/EU. The full text of the EU declaration of conformity is available at the following internet address: [www.metzblue.com](http://www.metzblue.com).

| Radio Module Specifications   |                          |
|---|--------------------------|
| Wireless Network(WLAN)  |                          |
| Frequency Band  | Transmitting Power(Max.) |
| 2.4G:<br>2412 ~ 2472 MHz<br>2422 ~ 2462 MHz<br><br>5G:<br>Band I:<br>5180~5240 MHz<br>5190~5230 MHz<br>5210 MHz (May not be available)<br>Band II:<br>5260~5320 MHz<br>5270~5310 MHz<br>5290 MHz (May not be available)<br>Band III:<br>5500~5700 MHz<br>5510~5670 MHz<br>5530~5610 MHz (May not be available)  | <20dBm                   |
| Bluetooth   |                          |
| Frequency Band  | Transmitting Power(Max.) |
| 2.402GHz~2.480GHz   | <20dBm                   |
| <b>Remark:</b><br>1). The device should be positioned or operated at least 20cm away from the user.<br>2). Due to various sales regions, the wireless module may have different configurations which will not exceed the maximum described in this manual.<br>3). Restrictions or Requirements in following countries: Indoor use only within 5150-5350MHz. |                          |
|    | FRDEUKITNLBELUTR         |
|   | DKIEGRESPTEATFILI        |
|   | SECYMTPLHUCZSKIS         |
|   | SIEEVLVLTBGROHRNO        |

# TROUBLE SHOOTING

Before calling a service technician, please check the following table for a possible cause of the symptom and some solutions.

## General Problem / Solution

- **Remote control does not work**  
Change the batteries.  
Check if batteries are installed correctly.  
Check if main power is connected.  
Check if there are some items between remote sensor and remote control.
- **Poor Signal**  
This is usually caused by interference from electronic equipments or radio interference sources.

## Picture & Sound / Solution

- **No picture, no sound**  
Check the signal source.  
Plug another electrical device into the outlet to check if it is working or turned on.  
Check if power plug is in good contact with the outlet.
- **No sound, picture OK**  
If no sound, unmute the sound or increase the volume.  
Open the sound menu and adjust 'Balance'.
- **Abnormal picture**  
For no color or bad picture quality, you may:
  1. Adjust the color option in menu settings.
  2. Keep the TV at a sufficient distance from other electronic products.
  3. Try another channel.Bad TV signal (Display mosaic or snowflakes)
  1. Check the signal cable and adjust the antenna.
  2. Fine tune the channel.
  3. Try another channel.

## Multimedia Player / Solution

- **'This file is invalid' / 'Unsupported audio' appears , or audio is normal but video is abnormal, or video is normal but audio is abnormal**  
The media file maybe damaged, check if the file can be played on the PC.  
Check if video and audio codec is supported.

## Network / Solution

- **Network failure**  
Check if the router works well.  
Make sure the TV has connected to the router successfully.

## Browser / Solution

- **Web page can not be displayed completely**  
Some third-party extensions of the current web page may not be supported, and please close the current web page.
- **Browser is forced to be shut down**  
There is insufficient memory to support opening a particular web page that is causing the browser to close.

# SPECIFICATION

*Note: Specifications may vary depending on the region or model.*

|   |  |
|---|--|
| <b>Working voltage:</b>                                   | DC 12.0V $\equiv$ 5.0A (Input range:11-30V DC)<br>AC Adapter : 100-240V $\sim$ 50/60Hz   |
| <b>Dimensions (W X H X D):</b>                            | 24": 548.5 x 366.2 x 74.1 mm   |
| <b>Net weight:</b>  | 24": 4.0 kg  |
| <b>Language of OSD:</b>                                   | Multiple options   |
| <b>Environment<br/>(only for Tropical climates zone):</b> | Working temperature: 5°C ~ 40°C<br>Working humidity: 20% ~ 70%<br>Storage temperature: -15°C ~ 45°C<br>Storage humidity: 10% ~ 70%<br><br><i>Note: Beyond this temperature range the battery will not be usable.</i> |

# LICENSE



Google TV is the name of this device's software experience and a trademark of Google LLC. Google, YouTube, Chromecast built-in and YouTube Music are trademarks of Google LLC.



The terms HDMI and HDMI High-Definition Multimedia Interface, and the HDMI Logo are trademarks or registered trademarks of HDMI Licensing Administrator, Inc. in the United States and other countries.



Manufactured under license from Dolby Laboratories. Dolby, Dolby Audio, and the double-D symbol are trademarks of Dolby Laboratories Licensing Corporation.

*Note:*

- 1. The pictures in this document are only for reference.*
- 2. Appearances and specifications are subject to change without notice.*
- 3. In dry environment due to static electricity, the product may restart and return to the main OSD interface, USB player interface or the previous source mode. It is normal and please continue to operate the TV as you will.*